


---

# DEPLOYING A CHILLBOX

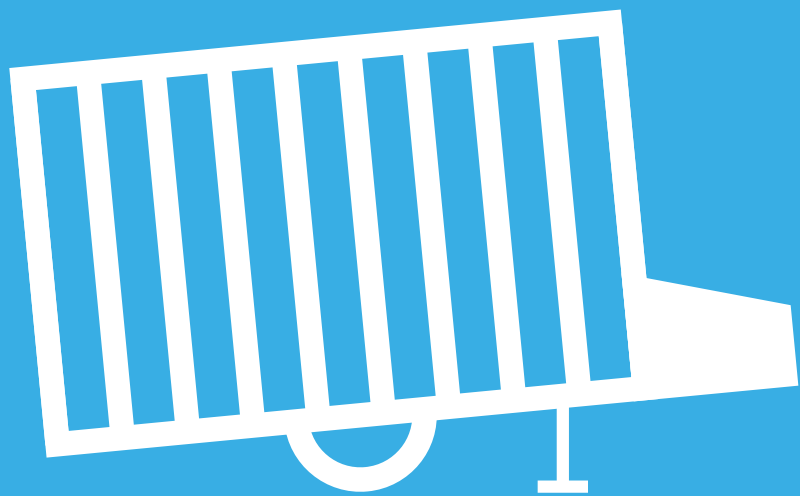

**CHILLBOX**

# DEPLOYING A CHILLBOX

1/3



[1] Chillbox decoupled from the towing vehicle and handbrake on.



[2] Insert handle and ensure hydraulic pump lever is pointing to the left.



[3] Pump the hydraulic pump handle to extend the hydraulic rams until the two wheels are off the ground.



[4]



[5]



[6]



[7]



[8]



[9]



[10] Turn the jockey wheel 90 degrees.



[11]



[12]

# DEPLOYING A CHILLBOX



[13] Pull handbrake off.



[14]



[15]



[16] Disengage the axle locking pins.



[17]



[18]



[19] Push rod back into plate.



[20]



[21]



[22] Slowly move the lever to the right.



[23] As the lever is moved, the Chillbox will start to lower, the more you move the lever to the right, the faster it will lower.



[24]

# DEPLOYING A CHILLBOX



[25]



[26]



[27] Lower security hood and lock.



[28]

## TO PUT A CHILLBOX BACK ON ITS WHEELS, COMPLETE THE ABOVE IN REVERSE AND THEN ENSURE



[1] Ensure the hydraulic pump lever is to the right.



[2] Pump the handle until the hydraulic legs are completely retracted and the pumping action goes tight.



[3]



[4]



[5] Foot partially retracted.



[6] Foot fully retracted.